

MCG/MCG PRO Disassembly Quick Guide

Tools Needed:

- Long, thin Phillips-head screw driver
- VKB provided hex key (to remove palm rest)



MCG/MCG PRO Disassembly Quick Guide



Gently pull to remove 4-way switch cap.

(When putting everything back together, be aware that the switch cap only fits one way; observe the cutout!)

Remove palm rest.

MCG/MCG PRO Disassembly Quick Guide

Remove all screws (use a long, thin Phillips-head screwdriver).



MCG/MCG PRO Disassembly Quick Guide

Remove all screws (use a long, thin Phillips-head screwdriver).



MCG/MCG PRO Disassembly Quick Guide



You now have access to the MCG/MCG PRO's internal components.

When done:

- Re-assemble in reverse order.
- Ensure that that you don't overtighten the screws, as these screws are set within a threaded metal sockets and don't require much force.*
- Ensure to be gentle when installing the 4-way hat switch cap, as it only fits one way (observe the cutout); do not force it onto the button shaft.

For additional support, please visit the official VKB forum:

<http://forum.vkb-sim.pro/viewforum.php?f=24>

** Stripping these screws is not covered under VKB's manufacturers warranty (excessive force)!*